SDP-2 Quick Reference Guide

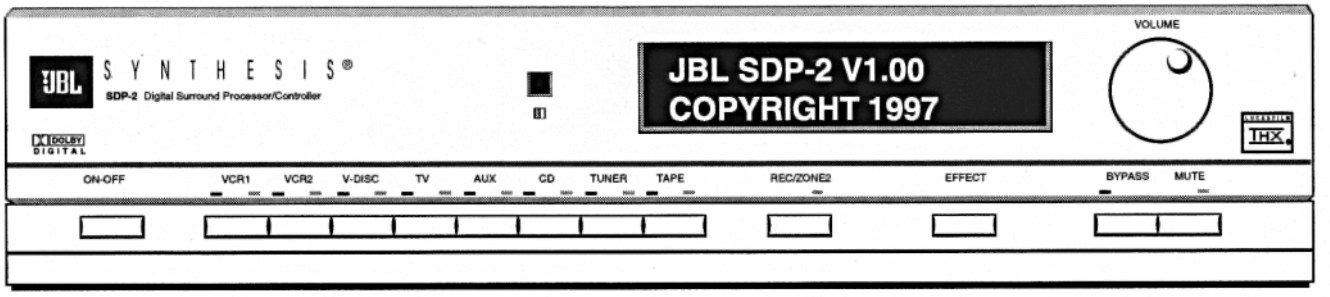

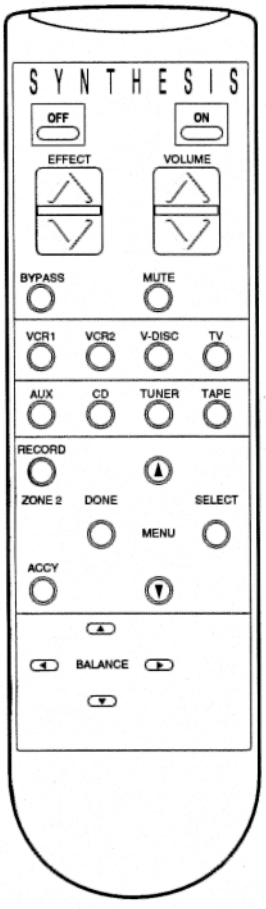

Finding your way through the SDP-2 Menus

On the remote control, press MENU SELECT, ▲ or ▼ to enter the Main menu.

Use MENU ▲ or ▼ to highlight an item. Press SELECT to open a submenu.

Continue highlighting and SELECTing to reach the parameter you want to change.

Adjust parameter with MENU ▲ or ▼. Your changes are saved automatically.

Press DONE to return to the previous menu. To exit, press EFFECT, any Input Selector, or RECORD/ZONE2.

MAIN MENU
- EFFECT ADJUST
- EQUALIZATION
- DISPLAY ADJUST
- SETUP

CURRENT EFFECT NAME
- EFFECT PARAMETERS & CURRENT SETTINGS

MUSIC SURROUND
PRO LOGIC
THX CINEMA
LOGIC 7™
TELEVISION
MONO ENHANCE
PANORAMA
JAZZ
CLASSICAL
FOOTBALL
CATHEDRAL
ROCK/POP
PARTY
TWO CHANNEL
5.1 MUSIC
5.1 DOLBY
5.1 DOLBY/THX
5.1 LATE NITE
5.1 TWO CHANNEL

EQUALIZATION MENU

BASS LEVEL	+0.0dB
TREBLE LEVEL	+0.0dB
TILT	+0.0dB
LOUDNESS	ON

DISPLAY ADJUST MENU
- ON-SCREEN DISPLAY
- FRONT PANEL DISPLAY

ON-SCREEN DISPLAY

STATUS	2 SECONDS
POSITION	TOP
FORMAT	NTSC
COLOR	ENABLED

FRONT PANEL DISPLAY

STATUS	ON
CONTRAST ADJUSTMENT	

SETUP MENU
- INPUT CONFIG
- SPEAKER CONFIG
- OUTPUT LEVELS
- LISTENER POSITION
- LOCK SETTINGS

INPUT CONFIG MENU
- VCR1
- VCR2
- V-DISC
- TV
- AUX
- CD
- TUNER
- TAPE

SELECTED INPUT

GAIN	AUTO
NAME	VCR1
EFFECT	PRO LOGIC
AC-3 FX	USE LAST
DIGITAL	NONE
VIDEO	VCR1
REC/ZONE 2	BLOCKED

SPEAKER CONFIG MENU

FRONT L/R	SMALL
CENTER	SMALL
SIDES	STD SMALL
REARS	NONE
SUBWOOFER	YES

OUTPUT LEVELS MENU

INTERNAL NOISE TEST	
EXTERNAL NOISE TEST	
SUB PK LIMITER	OFF
MUTE LEVEL	FULL MUTE
POWER ON VOL	-25dB
ZONE 2 VOLUME	-30dB

OUTPUT LEVELS ADJ

LEFT FRONT	+00dB
CENTER	+00dB
RIGHT FRONT	+00dB
RIGHT SIDE	+00dB
LEFT SIDE	+00dB
SUBWOOFER	+00dB
RIGHT REAR	+00dB
LEFT REAR	+00dB

LOCK SETTINGS MENU

SETTINGS	UNLOCKED
CUSTOM NAME	ON
ASSIGN CUSTOM NAME	
AUDIO BIT	AUTOMATIC

LISTENER POSITION

SURROUND DELAY	20ms
TIME ALIGNMENT	
A/V SYNC DELAY	
CALIBRATE PANORAMA	

CALIBRATE PANORAMA

CAL NOISE	
SPEAKER ANGLE	27°
LISTENER POS	CNTR

Input Connections

VCR1	_____
VCR2	_____
V-DISC	_____
TV	_____
AUX	_____
CD	_____
TUNER	_____
TAPE	_____

JBL Consumer Products
80 Crossways Park West, Woodbury NY 11797
(800) 336-4JBL

070-11338

© 1997 JBL

SDP-2 Quick Reference Guide

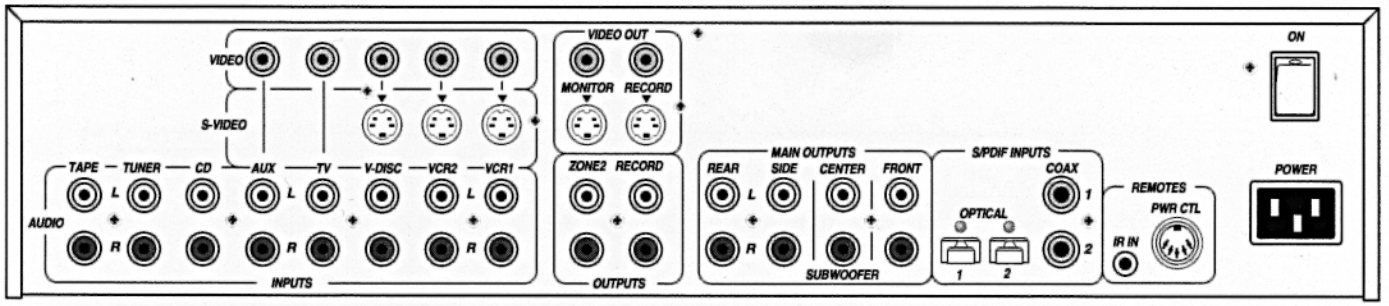

Exclusive RECORD/ZONE 2 Control Mode

RECORD/ZONE 2 Control mode allows use of the SDP-2 in another room while the room in which the SDP-2 is located remains muted.

To enter RECORD/ZONE 2 Control mode, turn on the SDP-2 by pressing the RECORD/ZONE 2 key on the remote.

Pressing any key other than the input selectors, MUTE or the BALANCE keys will display the message:

ZONE 2 MODE ENABLED
KEY INVALID

To exit, press OFF.

Digital inputs can be selected for the Record/Zone 2 outpus under the following conditions:

- A digitial input must be assigned to the input via the Setup menu.
- The input must have Record/Zone 2 set to DIGITAL.*
- The input must be selected for Main outputs.

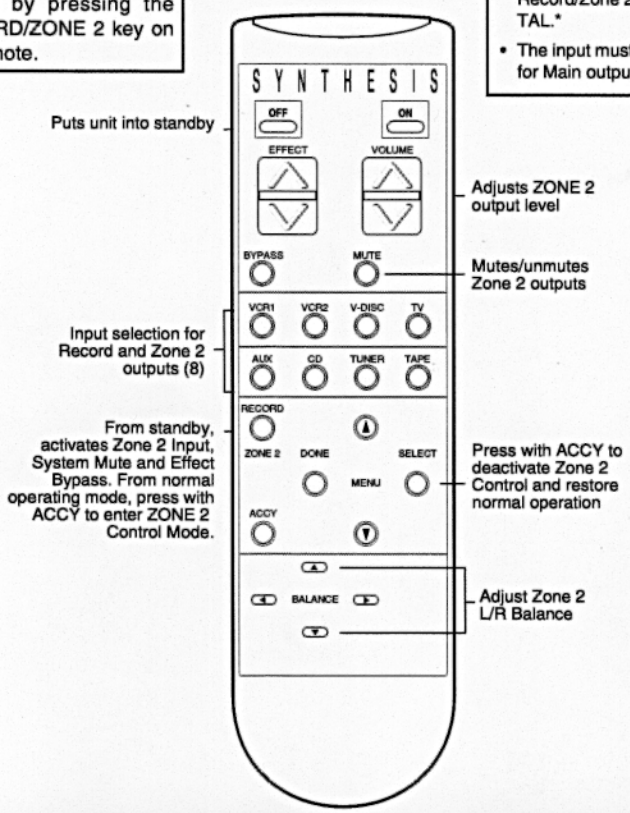

Remote Control ACCY Functions

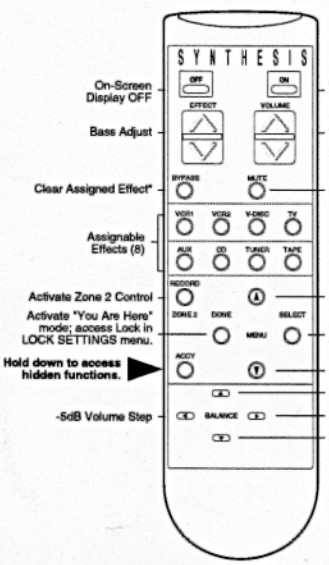

*To clear an assigned effect, hold down ACCY and press BYPASS, then press the associated input button.

Press and hold ACCY while pressing DONE to activate a "You Are Here" mode which:

- sets Bass, Treble and Tilt to Flat
- Sets volume to -10dB
- Leaves Loudness at current setting
- Loads the THX 5.1 Effect, or the THX Cinema Effect if no AC-3 is available
- Selects the V-DISC input
- Deactivates Zone 2 Control Mode

Input Effect Assignments

Note any Effects you have assigned to the remote control input keys.

		Default Setting
VCR1	_____	TELEVISION
VCR2	_____	5.1 LATE NITE
V-DISC	_____	5.1 DOLBY/THX
TV	_____	THX CINEMA
AUX	_____	ROCK/POP
CD	_____	JAZZ
TUNER	_____	CLASSICAL
TAPE	_____	MUSIC SURROUND

RECORD/ZONE 2 Control from the normal operating mode

In normal operation, pressing RECORD/ZONE 2 assigns (or de-assigns) the current input selection to the Record/Zone 2 outputs without affecting the Main outputs.

Holding down RECORD/ZONE 2 allows Volume and Mute adjustments to affect only the Record/Zone 2 outputs.

To access remote control Zone 2 functions, press and hold ACCY, then press RECORD/ZONE 2. To restore remote control of the main outputs, press and hold ACCY, then press SELECT.

JBL

JBL Consumer Products
80 Crossways Park West, Woodbury NY 11797
(800) 336-4JBL